

To Use the TV (Master + Living Room)



Use This Remote To:




Turn on the TV- Press TV Power (or All Power) for Cable Box
Change the Channel- Use the Keypad or CH +/-
Change the Volume- VOL +/-
Change the Input- Input, press Input until you are on the correct device (Roku or Cable Box)

Use This Remote To:



Turn on the T.V + Roku Device
Change the Volume- VOL +/-

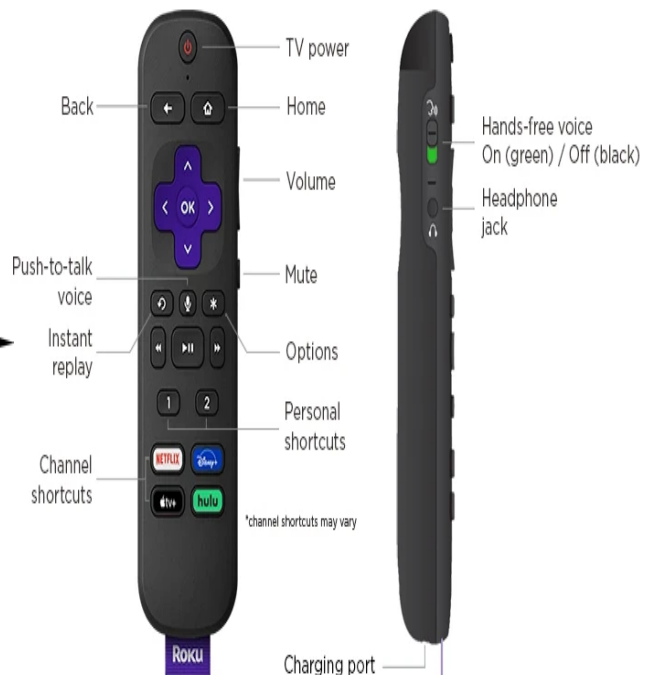

Troubleshooting:

Double Check the Power on the TV, and the input Device. Make sure the input is set to the correct device.