

To Use the TV (Master + Living Room)



Use This Remote To:

- Turn on the TV- Press TV Power (or All Power) for Cable Box
- Change the Channel- Use the Keypad or CH +/-
- Change the Volume- VOL +/-
- Change the Input- Input, press Input until you are on the correct device (Roku or Cable Box)

Use This Remote For

Roku:



Troubleshooting:

Double Check the Power on the TV, and the input Device. Make sure the input is set to the correct device.